

RS-232C 接続


▼ RS-232C INピンアサイン

NO	Pins	Signals
1	DTR	Data Transmission Reade
2	DSR	Data Set Reade
3	TXD	Transmit Data
4	GND	Ground
5	RXD	Receive Data
6	GND	Ground
7	IR OUT	IR Commander Signal
8	N.C.	No Connection


▼ RS-232C OUTピンアサイン

NO	Pins	Signals
1	DTR	Data Transmission Reade
2	DSR	Data Set Reade
3	TXD	Transmit Data
4	GND	Ground
5	RXD	Receive Data
6	GND	Ground
7	OPEN	Reserved
8	OPEN	Reserved

▼ RS-232C接続図

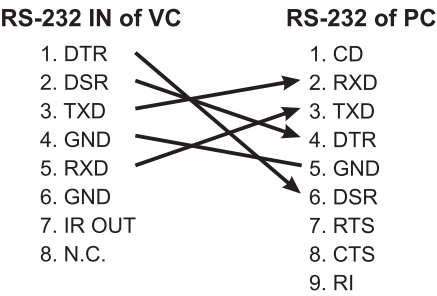

▼ RS-232C接続図

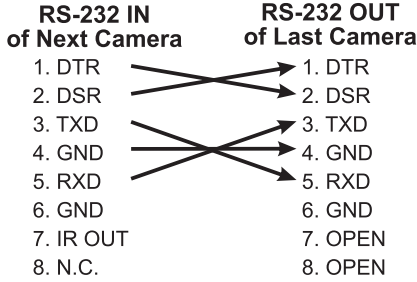

RS-422 接続

▼ RS-422ピンアサイン

Pin NO.	Function
1	RXD OUT-
2	RXD OUT+
3	TXD OUT-
4	TXD OUT+
5	GND
6	RXD IN-
7	RXD IN+
8	TXD IN-
9	TXD IN+

▼ RS-422シリアル接続


▼最大7台のカメラをデジチェーン接続できます。

▼ RS-422接続

Marshallカメラに適用

コントローラー

カメラ


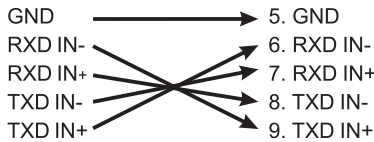


▼ RS-422接続

SONYカメラに適用

コントローラー

SONYカメラ

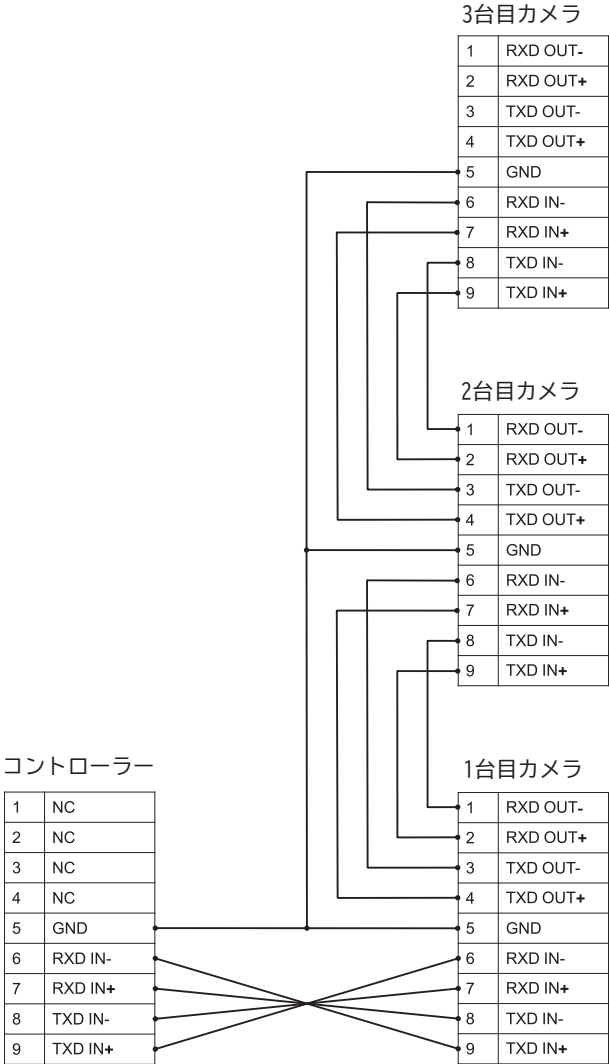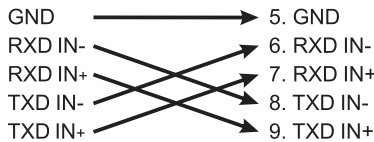

# Marshall

BROADCAST & PRO AV

7J \* &\$シリーズと  
VS-PTC-200 / RS422  
クイックセットアップ



コントローラーからカメラへ

GND to #5 on Camera  
RXD - to #9 on Camera  
RXD + to #8 on Camera  
TXD - to #7 on Camera  
TXD + to #6 on Camera

## カメラセッティング

Protocol - VISCA  
Baud Rate - 9600  
Camera ID - #1  
Control Port - RS422

## コントローラーセッティング

Set up  
ADMIN PIN #111111  
CAMERA SETTINGS - ENTER  
CAM ID #1 - ENTER  
PROTOCOL - V - ENTER  
BAUD RATE - 9600 - ENTER  
ADDRESS - #1 ENTER  
It will bring you back to the start  
hit ESC - Move Joystick